
TENT USER MANUAL

BEFORE USING YOUR SWITRA TENT PLEASE TAKE THE TIME TO READ THIS MANUAL, AS IT CONTAINS **IMPORTANT SAFETY INFORMATION AND GUIDELINES**. IT IS YOUR RESPONSIBILITY TO UNDERSTAND AND AGREE TO ALL GUIDELINES, WARNINGS, CAUTIONS, INSTRUCTIONS, AND SAFETY RECOMMENDATIONS. PERIODICALLY REVIEW THE INFORMATION IN THIS MANUAL AND **INSPECT YOUR TENT REGULARLY** FOR SIGNS OF DAMAGE. **DO NOT USE THE TENT UNLESS YOU ACCEPT ALL RISK OF INJURY AND/OR DEATH THAT MAY RESULT FROM YOUR USE.**

DISCLAIMER: Minors should not use the tent unless they are under continuous competent adult supervision. Make sure that the tent is only installed in areas where minors cannot access the tent without such adult supervision. Only adults should use the ratchet or adjust the tension of the lines.

The tent must only be used in the manner described in this Manual. Take the time to learn the proper use of all equipment and accessories, as You are using the tent at Your own risk. MISUSE OF THE TENT COULD CAUSE INJURY, PARALYSIS OR DEATH. NEVER OVER TIGHTEN LINES OR OVER STRESS ANCHORS. OVER TIGHTENING CAN CAUSE TENT SYSTEM FAILURE. THE TENT SYSTEM IS ONLY AS STRONG AS ITS WEAKEST LINK.

GENERAL GUIDELINES:

- Make sure that the tent is fixed only to anchors as described in the Instructions section. Do NOT attach the tent to any anchor point that is too weak to safely anchor and use the tent or that is not fixed, such as cars or heavy objects that are not anchored.
- Always use the tent at locations without any hazards and/or dangers. In order to avoid injuries, make sure that the ground and landing area over which the tent is suspended is flat, even, soft and free from dangerous objects.
- DO NOT set the tent at any height above **80 cm (31 inches)**.
- The tent is only to be used by one person at a time.
- Do NOT exceed **150 kg (330 lbs)** in weight on the tent at any time.

DISCLAIMER: The tent must be properly maintained and inspected before every use. Failure to inspect and maintain the tent before each use may result in tent malfunction and injury. The manufacturer and resellers of this tent explicitly disclaim any and all responsibility and liability for any death, paralysis, injury, and/or damage to any person or property that may occur that arises out of or is in any way related to the use of this product.

IMPORTANT: WHEN ASSEMBLED, THE TENT IS UNDER SIGNIFICANT TENSION WHICH MAY EQUAL OR EXCEED **1500 lb (700 kg)**. DUE TO THE HIGH TENSION OF THE TENT, GREAT CARE MUST BE EXERCISED WHEN USING THE TENT TO REDUCE THE RISK OF INJURY. OVERLOADING THE TENT WITH MORE THAN **150 kg (330 lbs)** AND/OR MORE THAN ONE PERSON INCREASES THE TENSION AND MAY CAUSE THE TENT AND/OR RATCHET TO FAIL RESULTING IN INJURY.

Always abide by local laws to see where and how you may lawfully use the tent. Building a tent may be restricted on public property in some cities and/or provinces.

Switra will NOT accept any responsibility for such any accidents or damages caused by misuse or failure of the equipment.

WARRANTY: This product is warranted against any material or manufacturing defect **for one (1) year from the purchase date** as stated on a valid receipt. THIS WARRANTY DOES NOT COVER OR INCLUDE ANY DAMAGE OR DEFECT CAUSED BY: NORMAL WEAR AND TEAR, MODIFICATIONS OR ALTERATIONS, INCORRECT STORAGE, POOR MAINTENANCE, AND/OR DAMAGE DUE TO ACCIDENTS, NEGLIGENCE, OR MISUSE (INCLUDING BUT NOT LIMITED TO ANY USE NOT EXPLICITLY APPROVED IN THIS MANUAL). Be sure to thoroughly dry the tent before storing.


Other than as described above, THE MANUFACTURER, SELLERS, AND RESELLERS OF THIS PRODUCT MAKE NO OTHER REPRESENTATIONS AND/OR WARRANTIES, EITHER EXPRESS OR IMPLIED, REGARDING THE PRODUCT, INCLUDING WITHOUT LIMITATION, ANY WARRANTIES AS TO MERCHANTABILITY, QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE MANUFACTURER, SELLERS, AND RESELLERS SHALL NOT BE LIABLE IN ANY WAY WHATSOEVER FOR SPECIAL, INDIRECT, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, WHETHER BASED ON BREACH OF CONTRACT, BREACH OF WARRANTY, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY OR OTHERWISE, EVEN IF THEY HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE TENT USER AGREES THAT HIS OR HER FULL REMEDY AGAINST THE MANUFACTURER, SELLERS, AND RESELLERS FOR ANY LIABILITY, CLAIMS, OR DAMAGES, SHALL BE LIMITED TO THE PURCHASE PRICE OF THE TENT, AND IRREVOCABLY WAIVE ALL CLAIMS FOR ANY OTHER DAMAGES THAT SUCH TENT USER MAY HAVE.

WARNING: PLEASE TAKE THE TIME TO THOROUGHLY READ THIS MANUAL TO REDUCE THE PROBABILITIES OF INJURIES AND/OR DEATH.

02

1

Find two stable objects with distance between them 6 to 8m

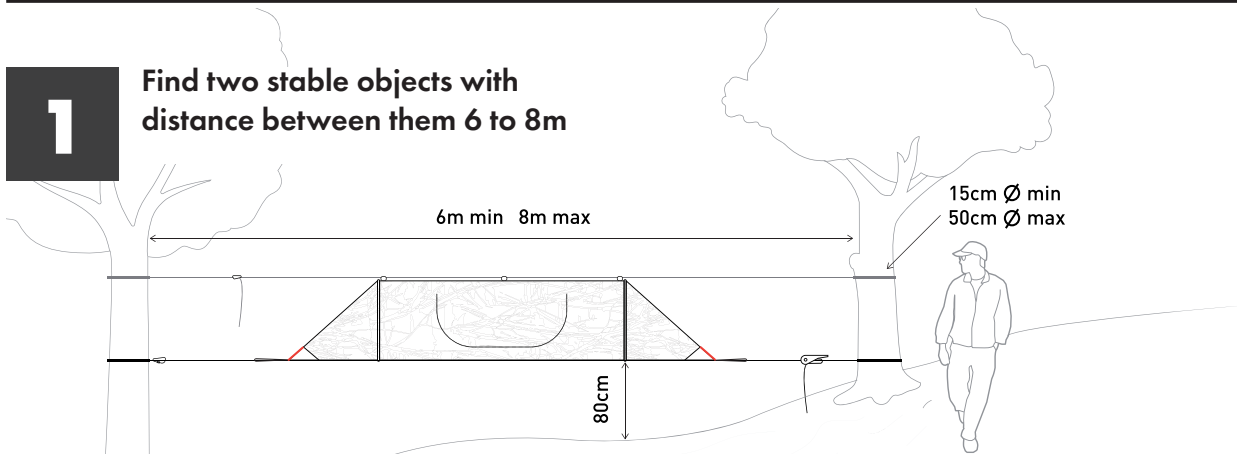


2

Place your tent in the middle of them.
Unpack it and unfold tent body*

*Remember that SWITRA tent can be great solution also for uneven surface as it will be hanging in the air.

3


Inspect all the items before assembling your tent.

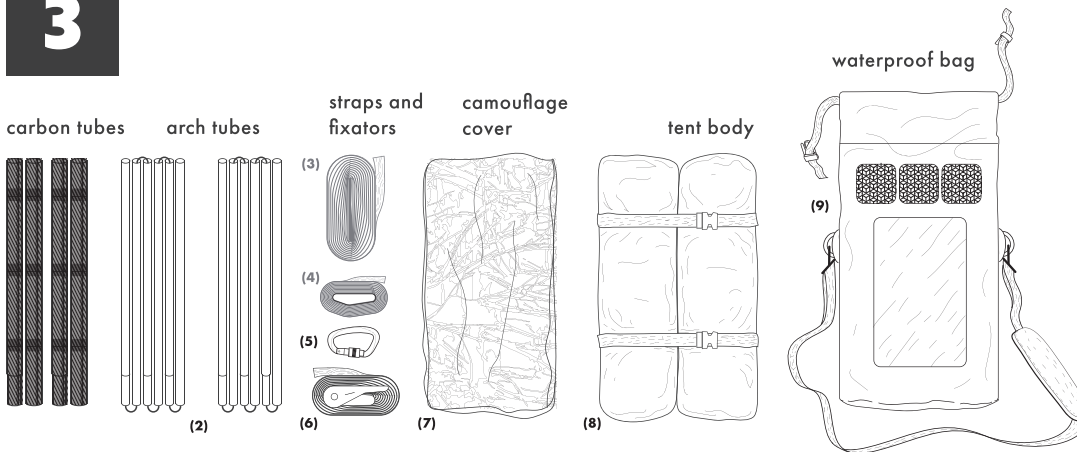


4

Noose the long line with attached connector (5) around suitable tree or anchor point* Set the height at around 80cm from ground. Fix connections.


*You can choose to readjust hook on line of connector (5) so that you have to throw it around just two times.

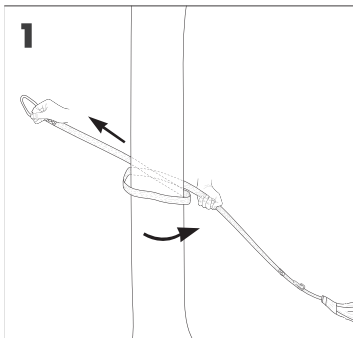

SETTLE AROUND THE OBJECT
Settle around the object

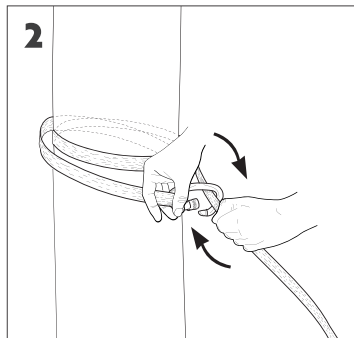


FIX THE END TO THE LINE
Fix the end to the line

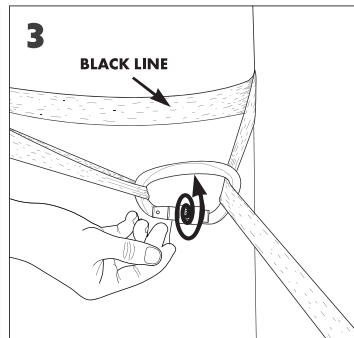


SCREW UP THE PADDING
Screw up the padding

5

Place the tubes (1), (2) in both ends of the tent body (8) while it's still laying on the ground.

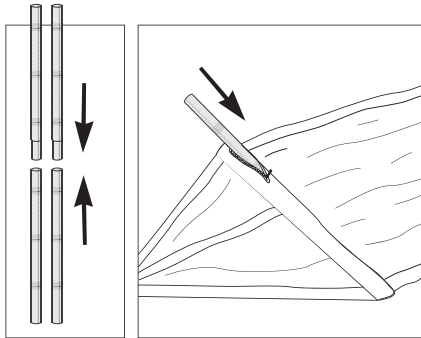




Assemble both pairs of carbon tubes (1). Place them into both end pockets on the bottom of the tent body (8). Close the pocket zipper.

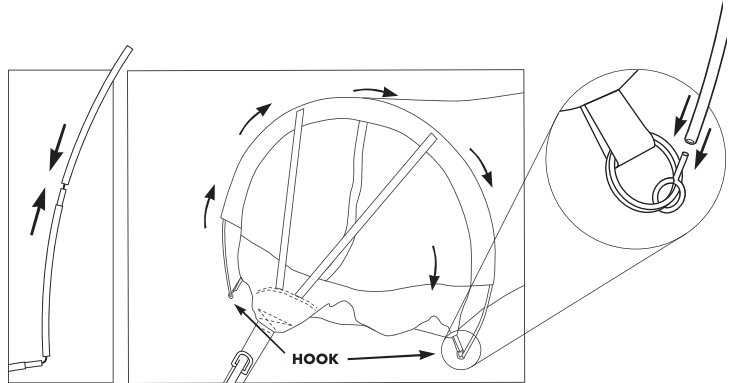


Assemble both pairs arch tubes (2). Place them into arch tunnel on the both top ends of the tent body (8). Place the ending into hooks at the corners of the tent body (8)

6


Noose the ratchet (6) end on opposit tree or anchor point. Set the same hight around 80cm from ground and join to the strap of the tent's main body (8).

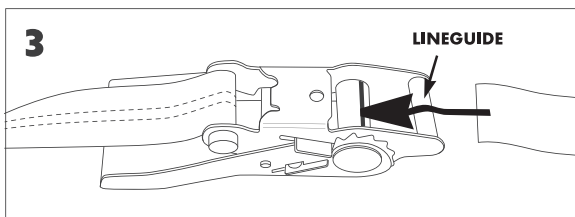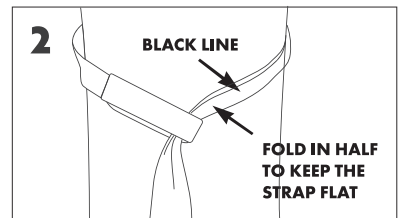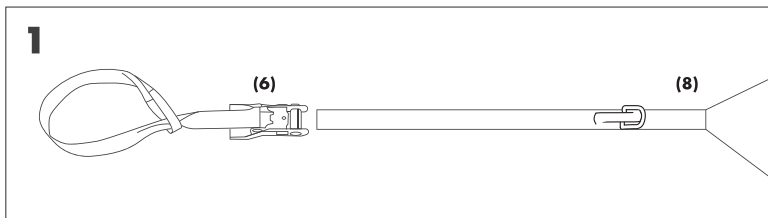


Feed line trough the bolt on ratchet (6). Keep the line straight. Make sure you feed the line over the lineguide.

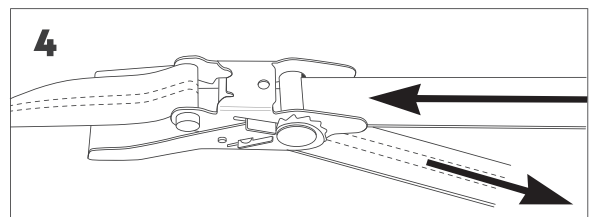

Pull through all the strap, until the line is tight.

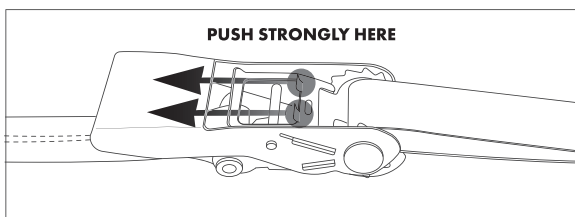


Turn the ratchet over and unlock by pulling out the release lever.

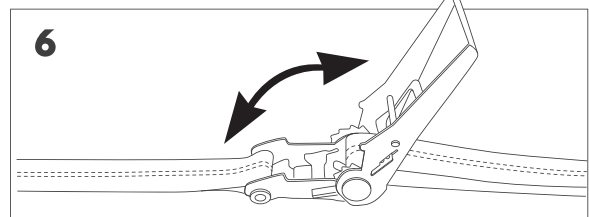

Pull the handle up & down to tighten the tent position. Do not over fill the ratchet – tighten the line to suit your preferences.


7

Attach one side of camouflage cover (7) while tent is upside down. Use the hooks on the side of main body (8).

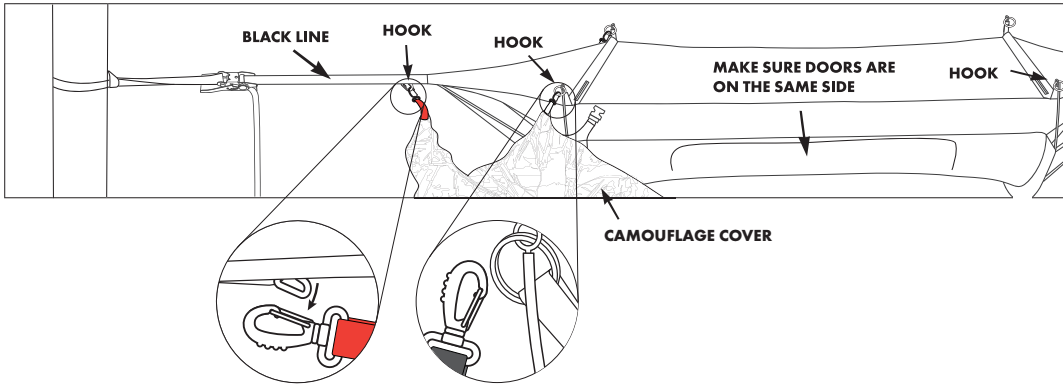


8

Rotate tent right side up and easily attach the other side of camouflage cover (7). Join bottom cover straps.

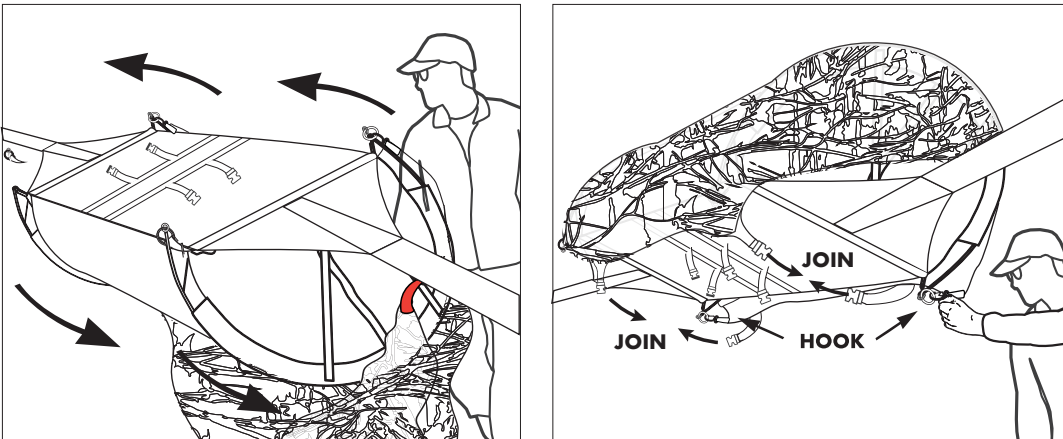

9

Noose the upper strap (3) and connector (4) & adjust tension, so that your tent gets a balanced position

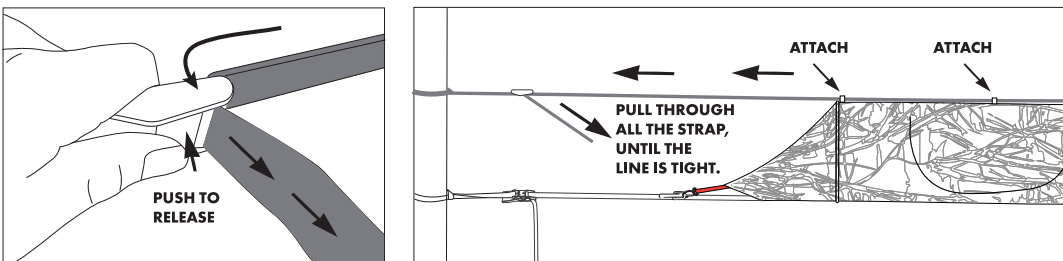

10

It's done! Enjoy your SWITRA tent.


Remember: You may need to add tension after a while. To do so follow step 6.5, 6.6.*

* Ratchet releaser may get stuck during wet weather, or overnight stay as the conditions change, push stronger on line to release strap


11

To release the line, unlock the ratchet by pulling out the release lever firmly. Push the ratchet right back until the line snaps loose.


1. Push on elements marked with red box stickers to release

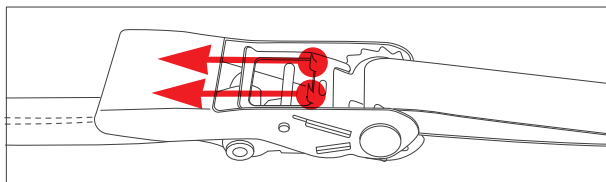

2. Turn lever to open strap

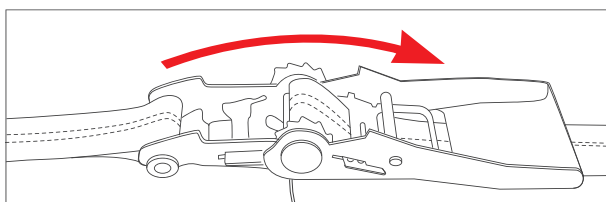


3. If after opening strap it's still jammed push down on it strongly to release.

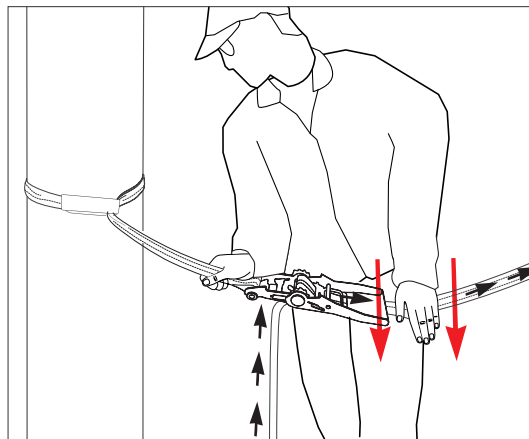

When tent is used overnight different weather conditions may cause jammed ratchet (strap not releasing). In case of jamming, please open ratchet and push on strap hard enough until it pops out of ratchet.

4. Push on releaser marked with sticker to open red line

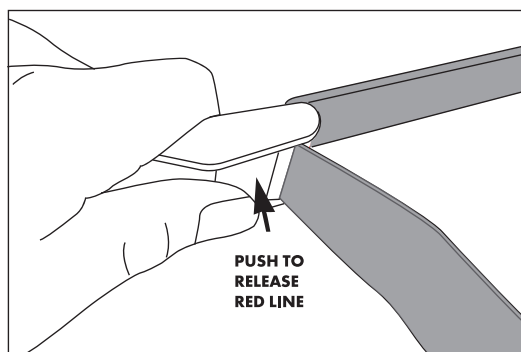

**Have
a great
Camping!**

